

NEW

ULTRASONIC ANIMALCHASER

Chases Unwanted Animals out of your Garden and Yard!

New Ultrasonic **AnimalChaser** is the most humane and environmentally friendly way of keeping gardens, lawn and yard free of unwelcome animals (dogs, cats, squirrels, outdoor rodents etc.) without harming them.

CHARACTERISTICS

Ultrasonic **AnimalChaser** projects 130 dB of ultrasound at frequency range of 16,000 Hz to 23,000 Hz. Combined with the unique design of variable sound waves, intruding creatures will not become immune to the emissions from Ultrasonic **AnimalChaser**.

Ultrasonic **AnimalChaser** protects an area of approximately 2,000 square feet of unobstructed space in a fan shape outdoors, with a radius of about 50 feet in a 90 degree arc, and can be used indoors to permanently protect a given area from dog or cat intrusion. Ultrasonic **AnimalChaser** includes a main unit, an adapter, a 18 ft. extension cord and a specially designed mounting shelter.

You may mount the Ultrasonic **AnimalChaser** to the wall outside of your building, on a ledge or attach it to a post. A red LED indicator will be on after plugging in to indicate the proper operation of Ultrasonic **AnimalChaser**. Although the unit is weather-resistant, it is recommended to remove the main machine from the mounting shelter if storms or heavy rain are expected.

The ultrasonic sound emitted cannot be heard by humans but is uncomfortable to animals, whose only reaction is to move away. The Ultrasonic **AnimalChaser** is connected to a non-hazardous low voltage power supply costing less than 2¢ per day to run.

HOW TO INSTALL:

1. Remove the main module from the mounting shelter by inserting a thin, blunt blade between the back of the unit and twisting gently. The module will slide out.
2. Mount the shelter between 1 and 3 feet from the ground to a post or wall within 24ft of a power socket. There is no need to use the extension cord if the unit is to be mounted less than 6 feet from the socket.
3. Replace the main module by pushing it into the mounting shelter.
4. Connect the extension cord and adapter with the main module.
5. After plugging in the adapter, the red LED will be on to indicate the Ultrasonic **AnimalChaser** is operating properly.

PLEASE NOTE:

Any obstacles e.g. trees, bushes, in front of the Ultrasonic **AnimalChaser** will limit the effects of the ultrasonic waves.

Do not immerse the Ultrasonic **AnimalChaser** in water or any other liquid.

Do not modify or tamper with the unit's internal components. Covering or painting over the front speaker can damage the device and cause it to malfunction.


Remove the main module from the mounting shelter when a storm or heavy rain is expected.

Turn off the device by pulling out the adapter if your pet is playing around the protected area.


SPECIFICATION:

Dimension	: 145 x 138 x 82 mm
Weight	: 255 g (excluding adapter & extension cord)
Power supply	: 220-240 VAC, 50/60 cycles, 110-120 VAC, 50/60 cycles
Power consumption	: 1 ½ watts
Frequency range	: 16,000 Hz to 23,000 Hz (continuously variable)
Output sound pressure	: 130 dB
Effective range	: approx. 2000 square ft. unobstructed

HOW THE ULTRASONIC ANIMAL CHASER WORKS:

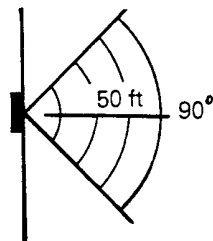

DC POWER INPUT
(underside of module)

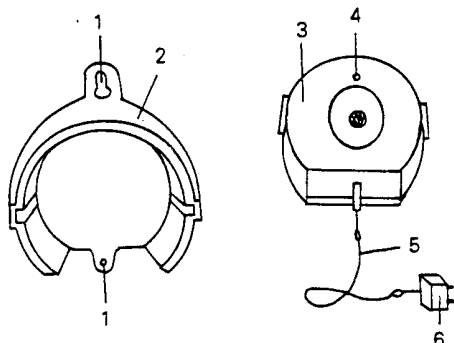

1. MOUNTING HOLES
2. MOUNTING SHELTER
3. MAIN MODULE
4. L.E.D. INDICATOR
5. EXTENSION CORD
6. 9V DC ADAPTER